

QuickStart Instructions



1. Carefully remove contents from packaging. Unwrap each component before assembly. Handling plastic base of the lightbulb, screw into lamp base. *Figure 1.*
2. Close and secure cage by applying pressure on each clasp. Cage needs to be secured to prevent inadvertent direct contact with bulb. *Figure 2.*



Figure 1.

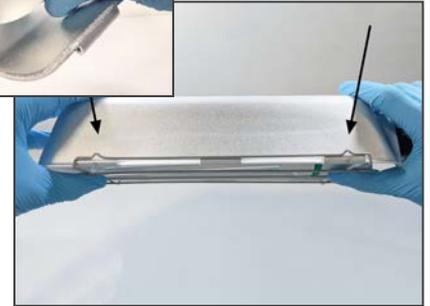


Figure 2.



Figure 3.

Figure 4.

3. Ensure lightswitch is toggled to the OFF (O) position before plugging in. Safely plug in the device to an outlet within range of the area you want to sanitize. *Figure 3.*
4. **You MUST wear safety glasses before toggling device on.** Make sure bulb/cage is facing away from your face and not in direct exposure to skin or eyes. *Figure 4.*

5. Toggle device to ON position (I). *Figure 5.*
6. Wave lamp over area to sanitize. When sanitizing is complete, turn lamp off. Do not touch the metal enclosure or cage, the device may be hot to the touch. *Figure 6.*
7. Store the UV-C lamp in a dry place. Use the built-in hanger on the handle to keep off the ground. Keep cord wrapped and out of reach to prevent damage or injury.



Figure 5.



Figure 6.

